

Home Decorators

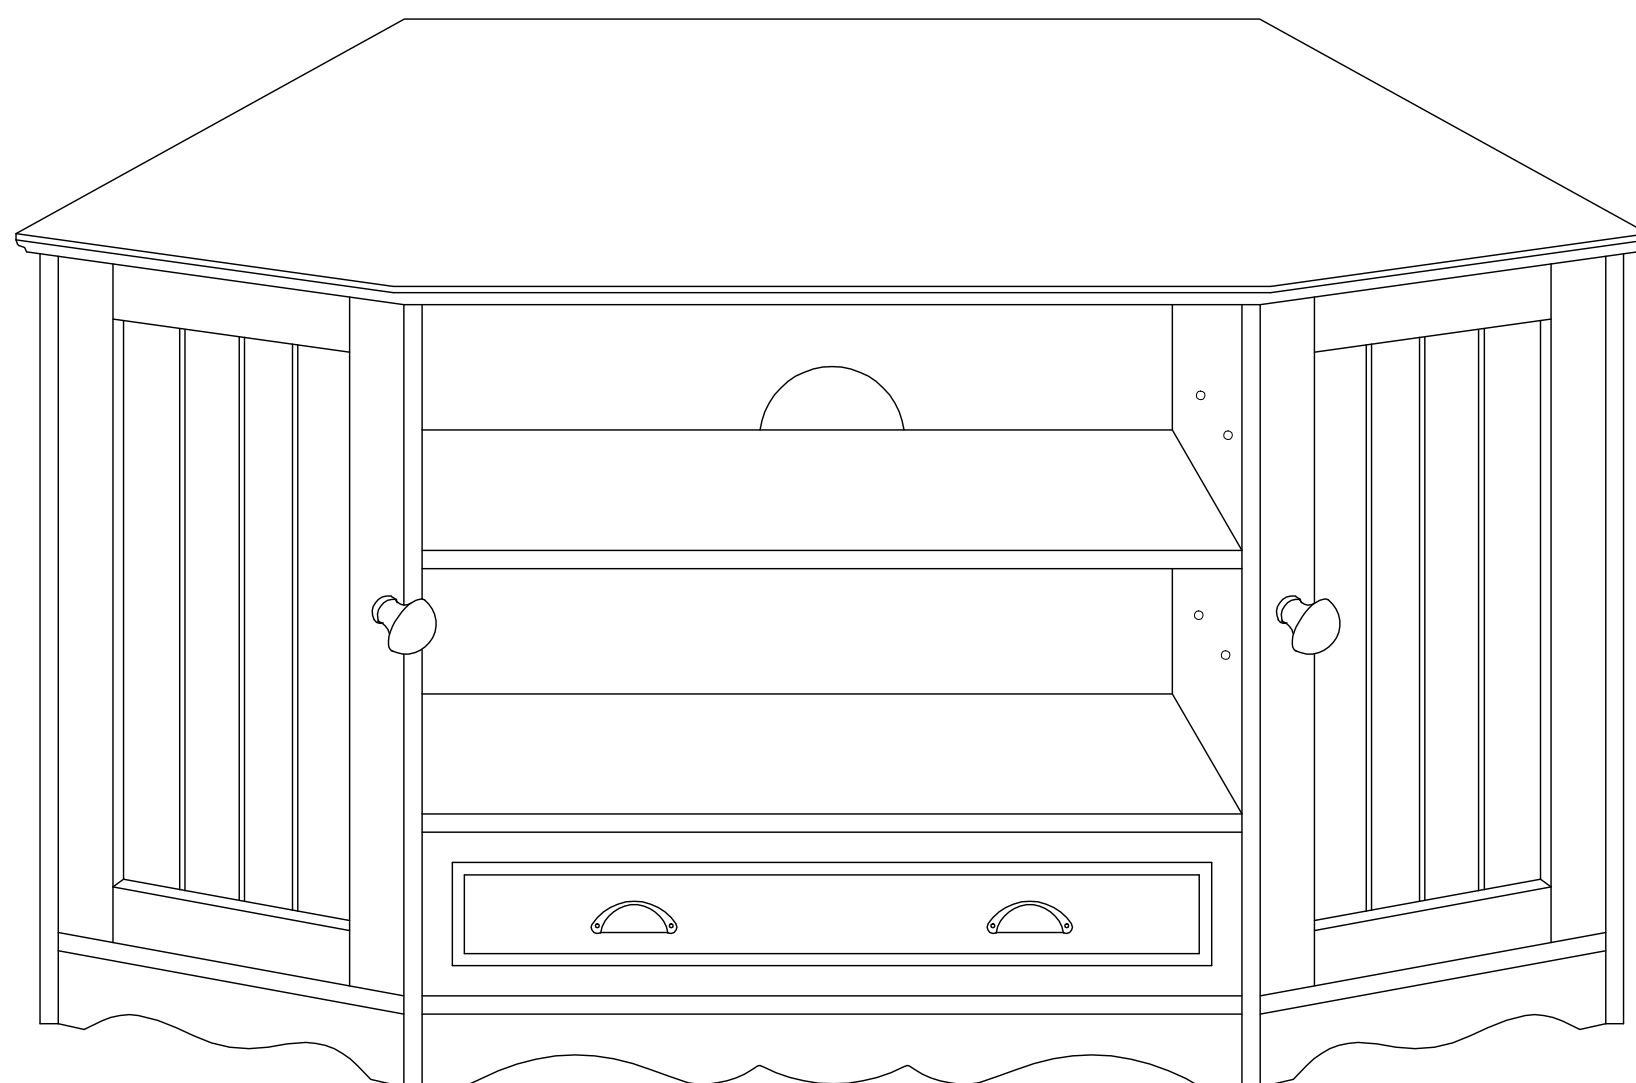
Collection

HDC# 08047 MFG# TW-18407IY
SOUTHPORT CORNER MEDIA CABINET 26"Hx53"W x20"D

ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.


Made In China




BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

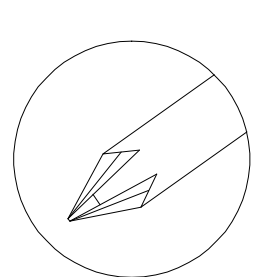
ASSEMBLY TOOLS REQUIRED




"+"Screw driver

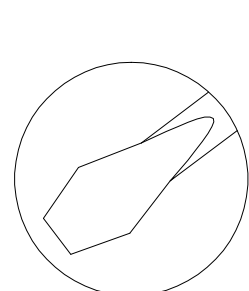

"-"Screw driver

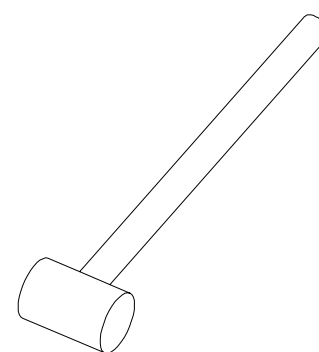


Rubber Mallet

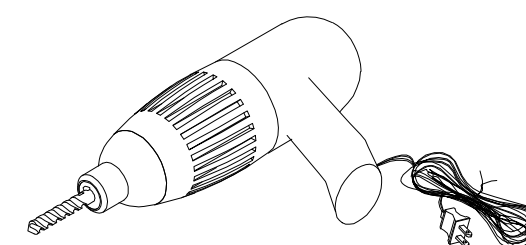

Electric drill

WOODEN DOWEL INSTALLATION PROCEDURE

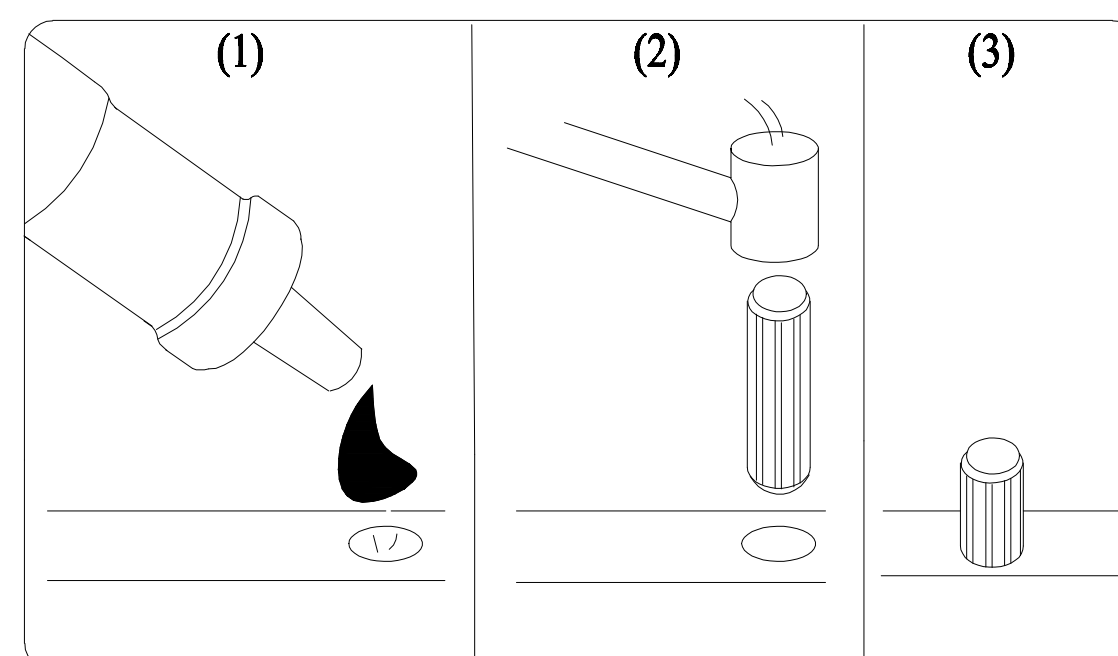- (1) FILL HOLE 1/4 FULL OF GLUE.
- (2) GENTLY TAP DOWEL INTO HOLE WITH RUBBER Mallet OR USE HAND PRESS IN.
DO NOT USE HAMMER
- (3) WIPE AWAY EXCESS GLUE.



HIDDEN CONNECTOR ASSEMBLY TECHNIQUES FOR LOCK NUT & LOCK PIN

1 SET INCLUDES: (C) CAM-LOCK 1PC. (A) CAM BOLT 1PC.

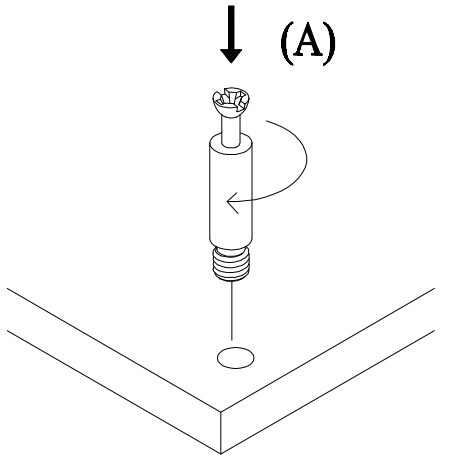
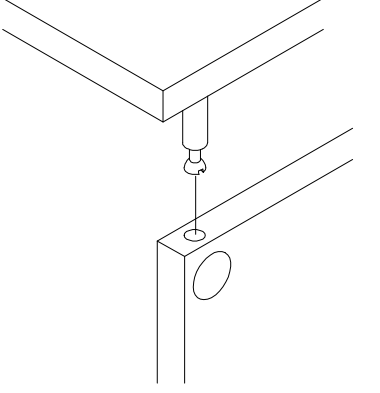
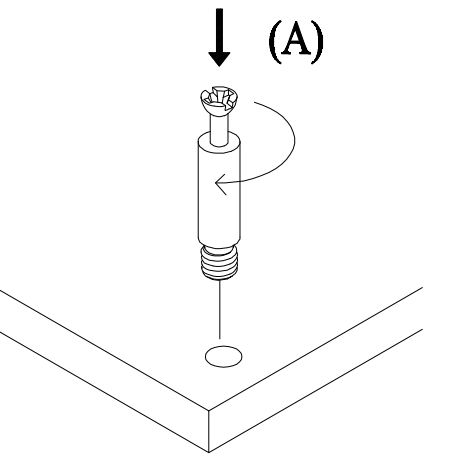
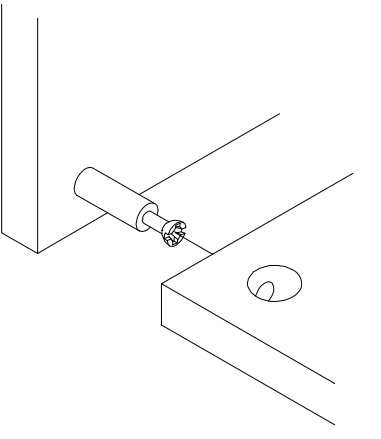
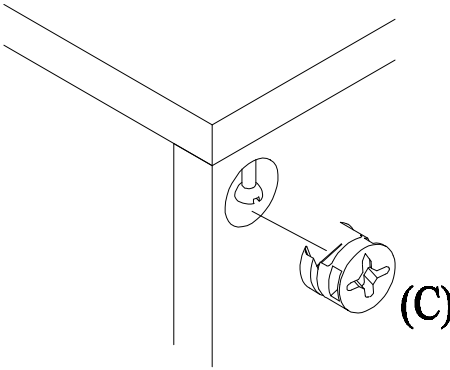
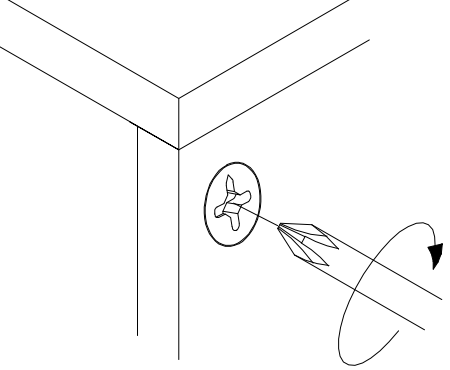
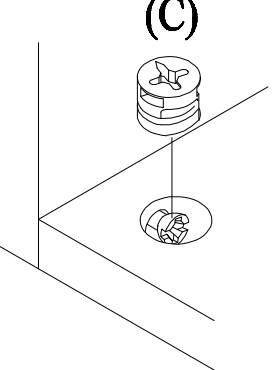
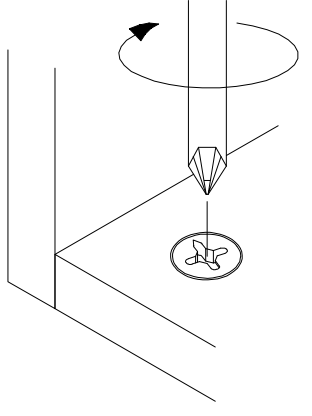
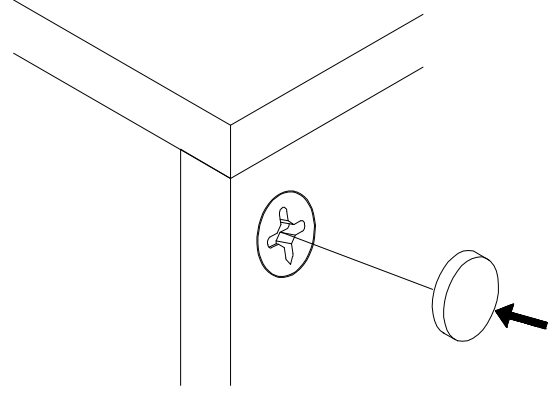
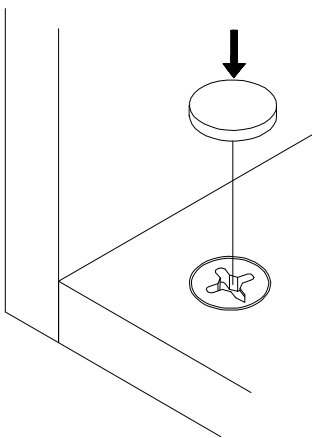
TOOL NEEDED: "+" SCREW DRIVER

STEP 1: SCREW CAM BOLT (A) ONTO PRE-SET PLASTIC NUT ON PANEL. USE A "+" SCREW-DRIVER FOR TIGHTENING. ATTENTION: DO NOT OVER TIGHTEN THE CAM BOLT (A).

















STEP 2: ATTACH BOTH PANELS, MAKE SURE YOU HAVE INSERTED THE CAM BOLT TO THE VERY DEPTH OF THE HOLE WITH RUBBER Mallet GENTLY, CAUTION: DO NOT USE HAMMER. THEN INSERT CAM-LOCK (C) INTO PRE-DRILLED HOLE ON PANEL, MAKE SURE THE ARROW ON CAM-LOCK (C) SET IN PANEL POINT TOWARD THE HOLE INTO WHICH THE CAM BOLT (A) HAS BEEN INSERTED AND INSERTED THE CAM-LOCK (C) TO THE VERY DEPTH OF THE HOLE.

STEP 3: ROTATE THE CAM-LOCK (C) CLOCKWISE TO SECURE CAM BOLT (A) BY TIGHTENING WITH A "+" SCREWDRIVER.
























DETAIL STEP PLEASE SEE THE BELOW PICTURE.

VERTICAL CONNECTION		HORIZONTAL CONNECTION	
(1) 	(2) 	(1) 	(2) 
(3) 	(4) 	(3) 	(4) 
(5) 	(5) 		

HARDWARE LIST

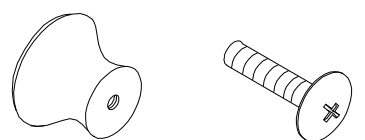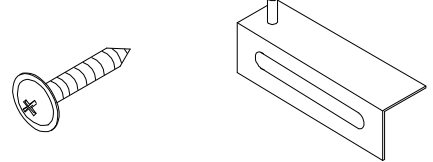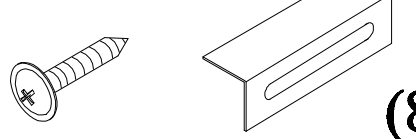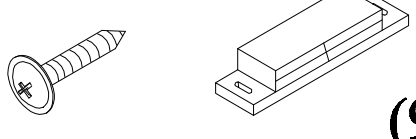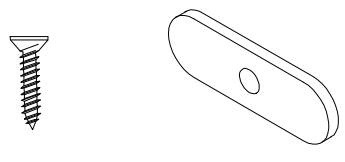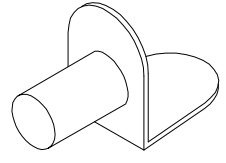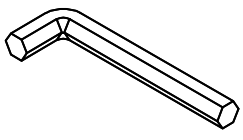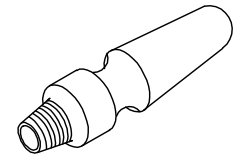
WOOD DOWEL 39 PCS  (1)	CAM BOLT CAM-LOCK 12 SETS  (2)	ROUND HEAD BOLT FLAT WASHER 22 SETS  (3)	KNOB ROUND HEAD BOLT 2 SETS  (4)	DRAWER LIMIT STOPPER ROUND HEAD SCREW 1 SET  (5)
KNOB ROUND HEAD BOLT 2 SETS  (6)	HINGE ROUND HEAD SCREW 2 SETS  (7)	HINGE ROUND HEAD SCREW 2 SETS  (8)	MAGNET LOCK ROUND HEAD SCREW 2 SETS  (9)	IRON SLICE FLAT HEAD SCREW 2 SETS  (10)
SHELF HOLDER 12 PCS  (11)	ROUND HEAD SCREW 27 PCS  (12)	FLAT HEAD SCREW 4 PCS  (13)	VELVET HOLE COVER 4 PCS  (14)	ALLEN KEY 1 PC  (15)
GLUE 1 PC  (16)				

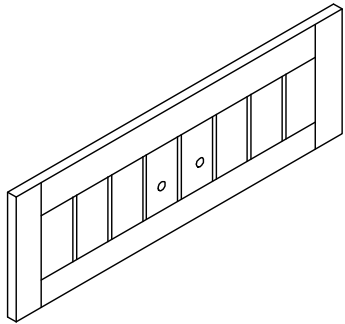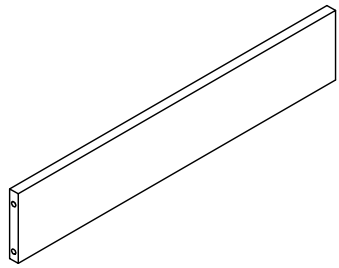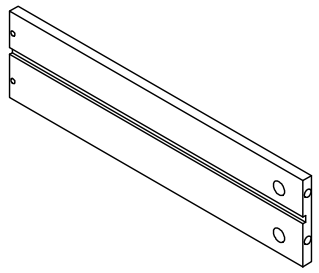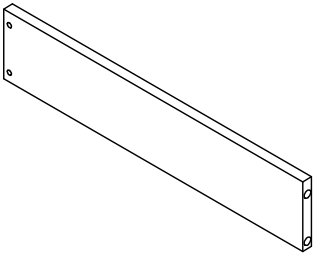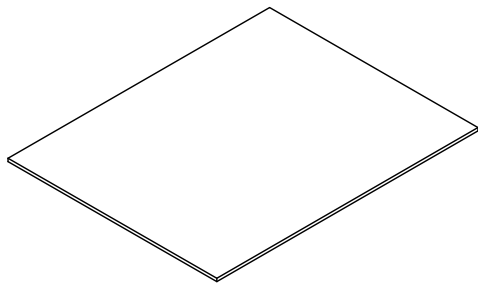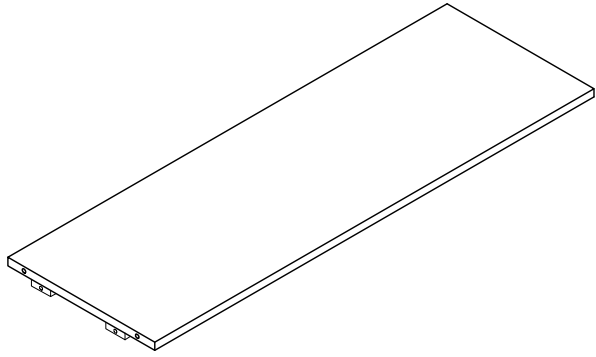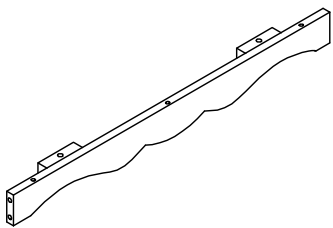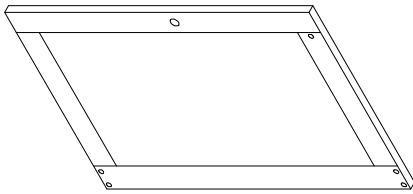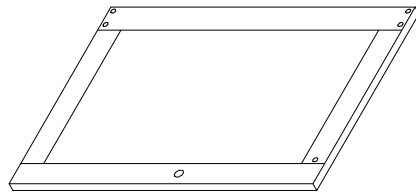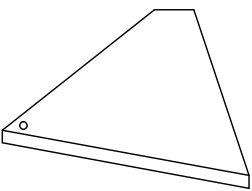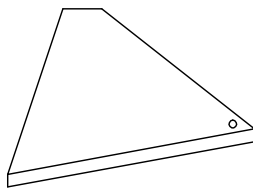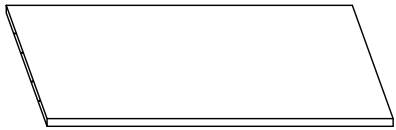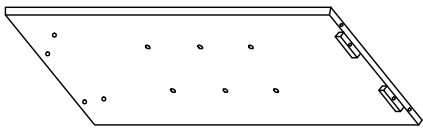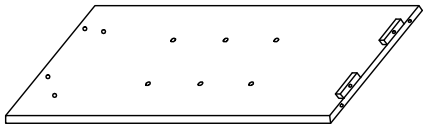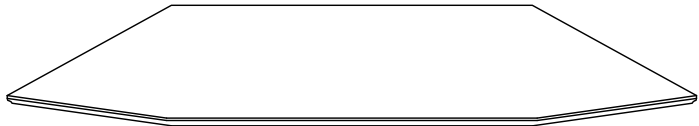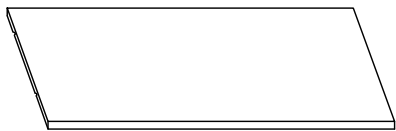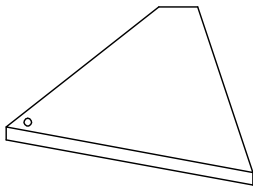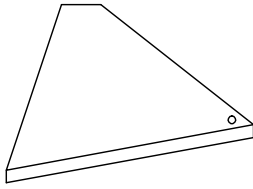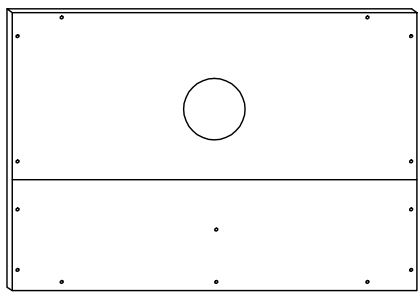PARTS LIST

DRAWER FRONT PANEL 1 PC  A	DRAWER BACK PANEL 1 PC  B	DRAWER LEFT SIDE PANEL 1 PC  C
DRAWER RIGHT SIDE PANEL 1 PC  D	DRAWER BOTTOM PANEL 1 PC  E	BOTTOM PANEL 1 PC  F
ACROSS PANEL 1 PC  G	LEFT DOOR 1 PC  H	RIGHT DOOR 1 PC  I
BOTTOM PANEL 1 PC  J	BOTTOM PANEL 1 PC  K	ACROSS PANEL 1 PC  L
SHELF 1 PC  M	LEFT MIDDLE PANEL 1 PC  N	RIGHT MIDDLE PANEL 1 PC  O
LEFT SIDE PANEL 1 PC  P	RIGHT SIDE PANEL 1 PC  Q	TOP PANEL 1 PC  R
SHELF 1 PC  S	SHELF 1 PC  T	SHELF 1 PC  U
BACK PANEL 1 PC  V	ACROSS PANEL 1 PC  W	


STEP 1: ASSEMBLE DRAWER

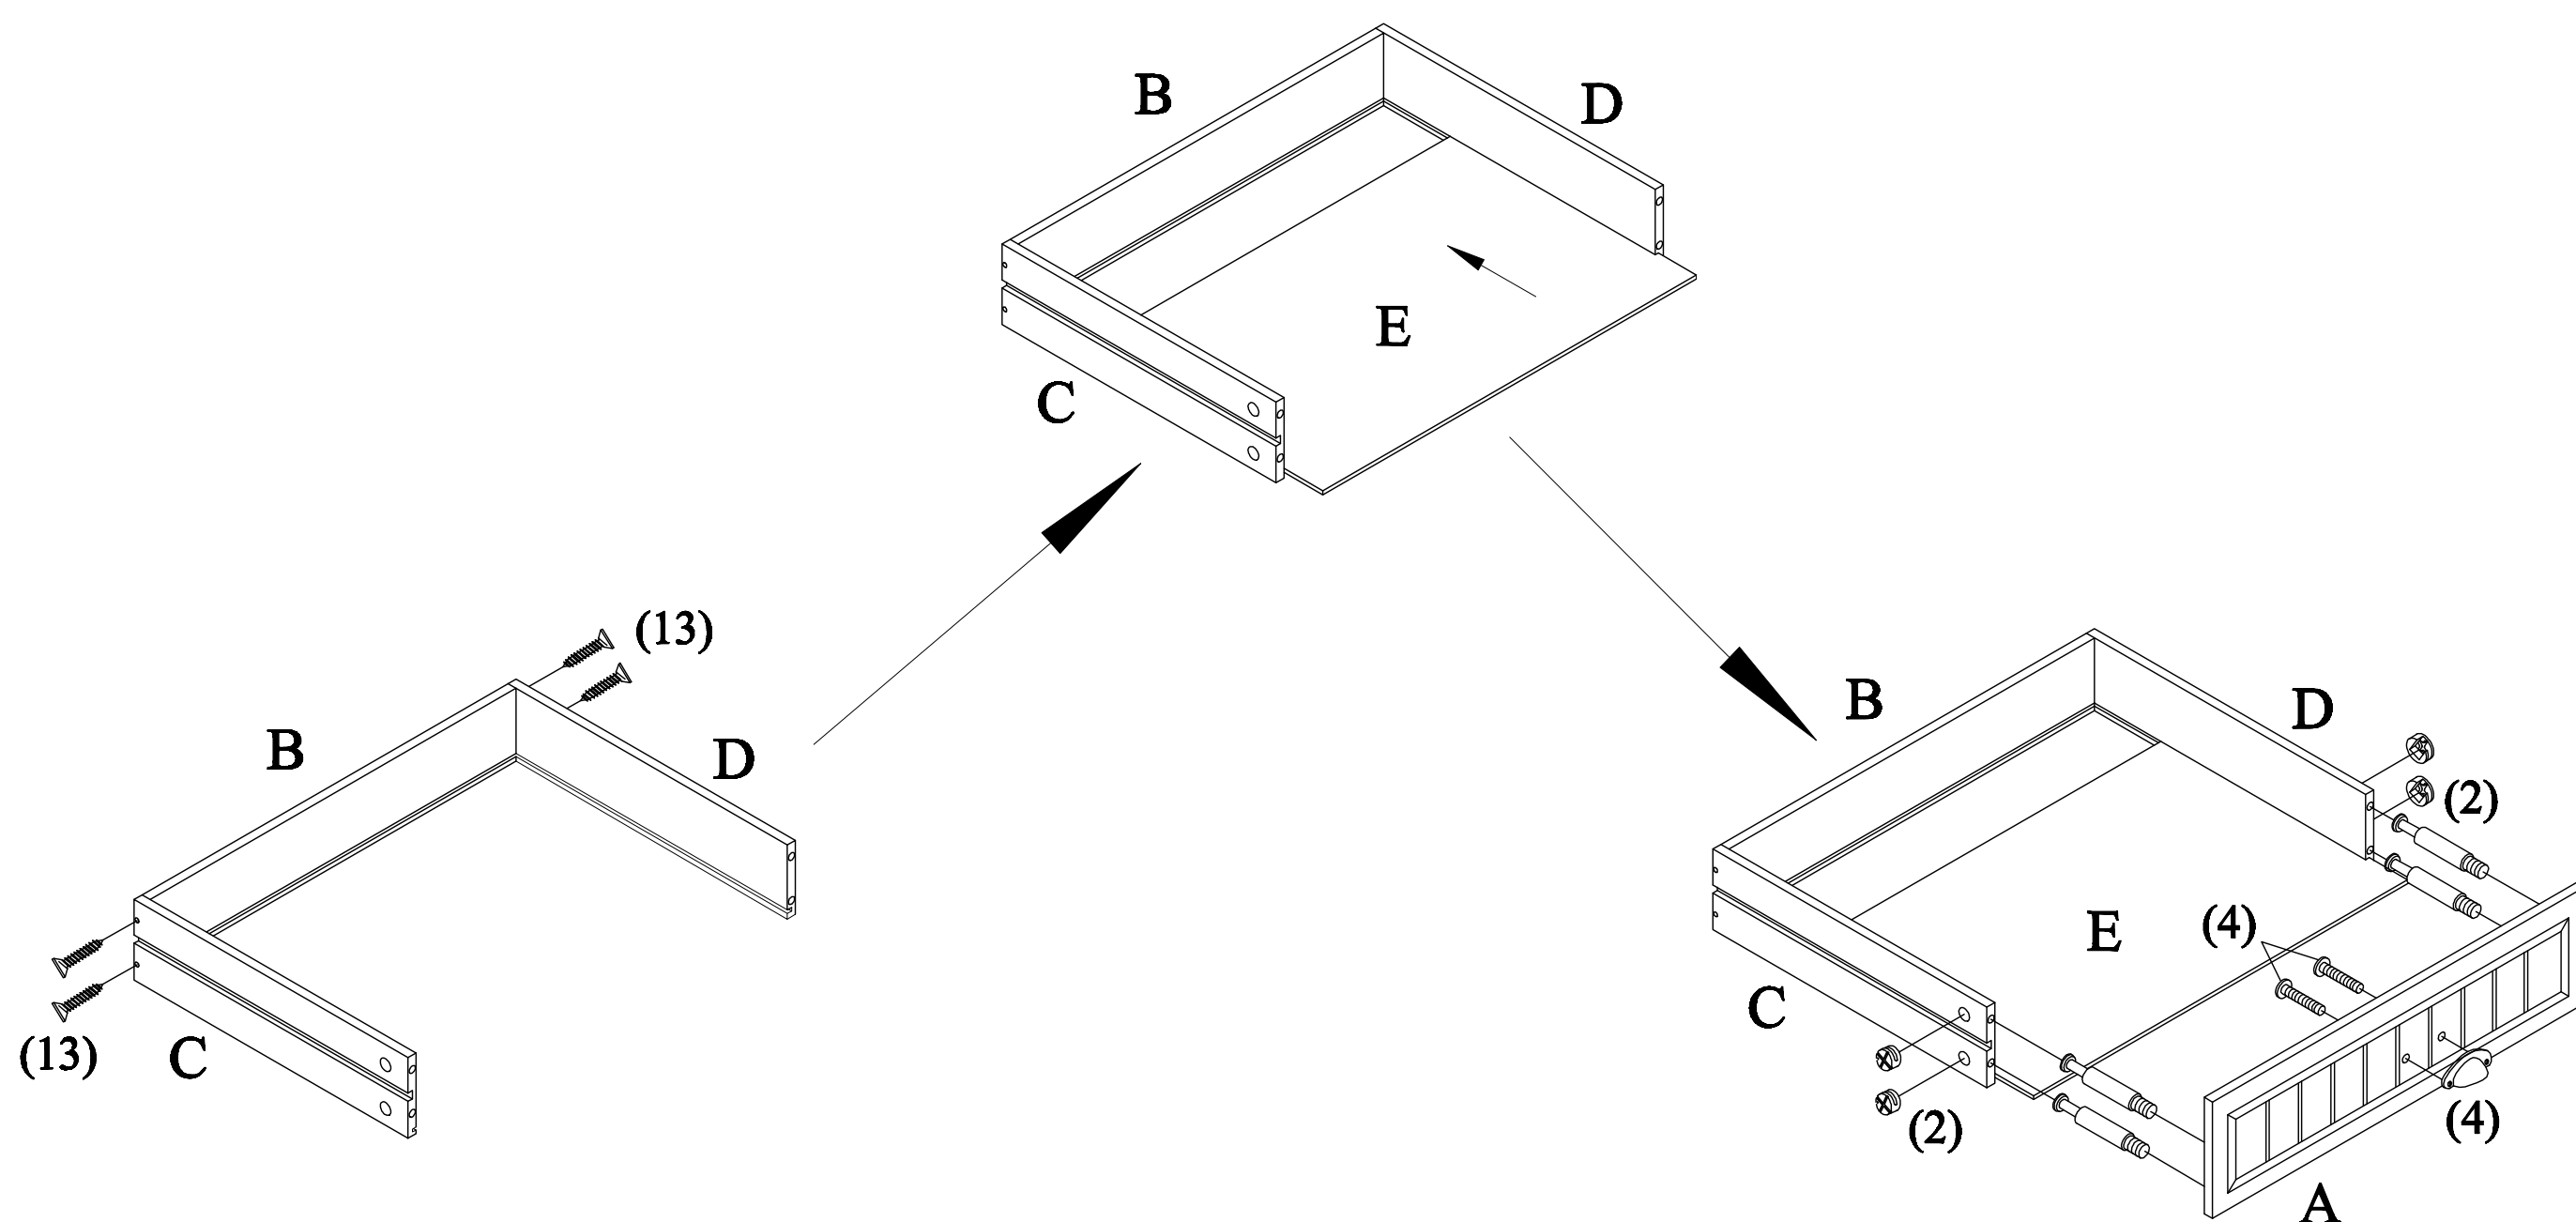- USE SCREW (13) TO ATTACH DRAWER SIDE PANEL (C & D) AND DRAWER BACK PANEL (B) TOGETHER.
- INSERT THE DRAWER BOTTOM PANEL (E) INTO SLOTS IN SIDE PANEL (C & D).
- USE CAM-BLOT & CAM-LOCK (2) TO FIX DRAWER SIDE PANEL (C & D) AND DRAWER FRONT PANEL (A).
- USE ROUND BOLT (4) TO ATTACH HANDLE (4) ONTO DRAWER DRAWER FRONT PANEL (A).




STEP 2: ASSEMBLE ACROSS PANEL (G) ON BOTTOM PANEL (F)

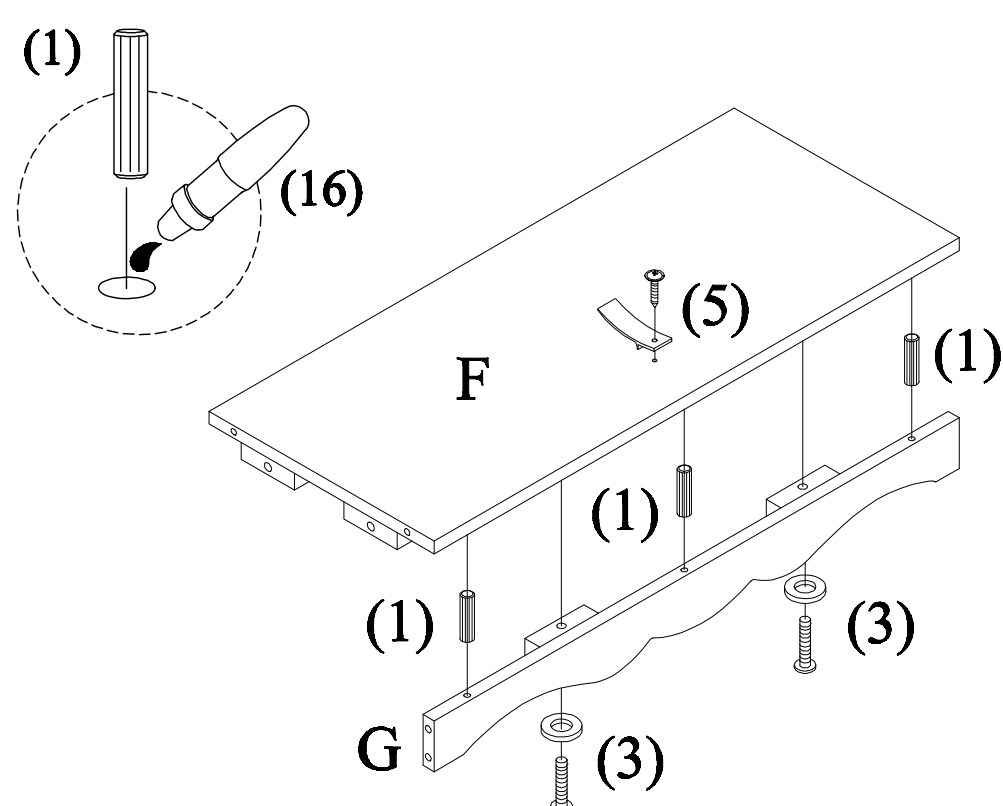- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (3) TO ATTACH ACROSS PANEL (G) AND BOTTOM PANEL (F) TOGETHER BY ALLEN KEY (15).
- USE ROUND HEAD SCREW (5) TO ATTACH DRAWER LIMIT STOPPER (5) ONTO BOTTOM PANEL (F).




STEP 3: ASSEMBLE ACROSS PANEL (L & W) ON BOTTOM PANEL (J & K)

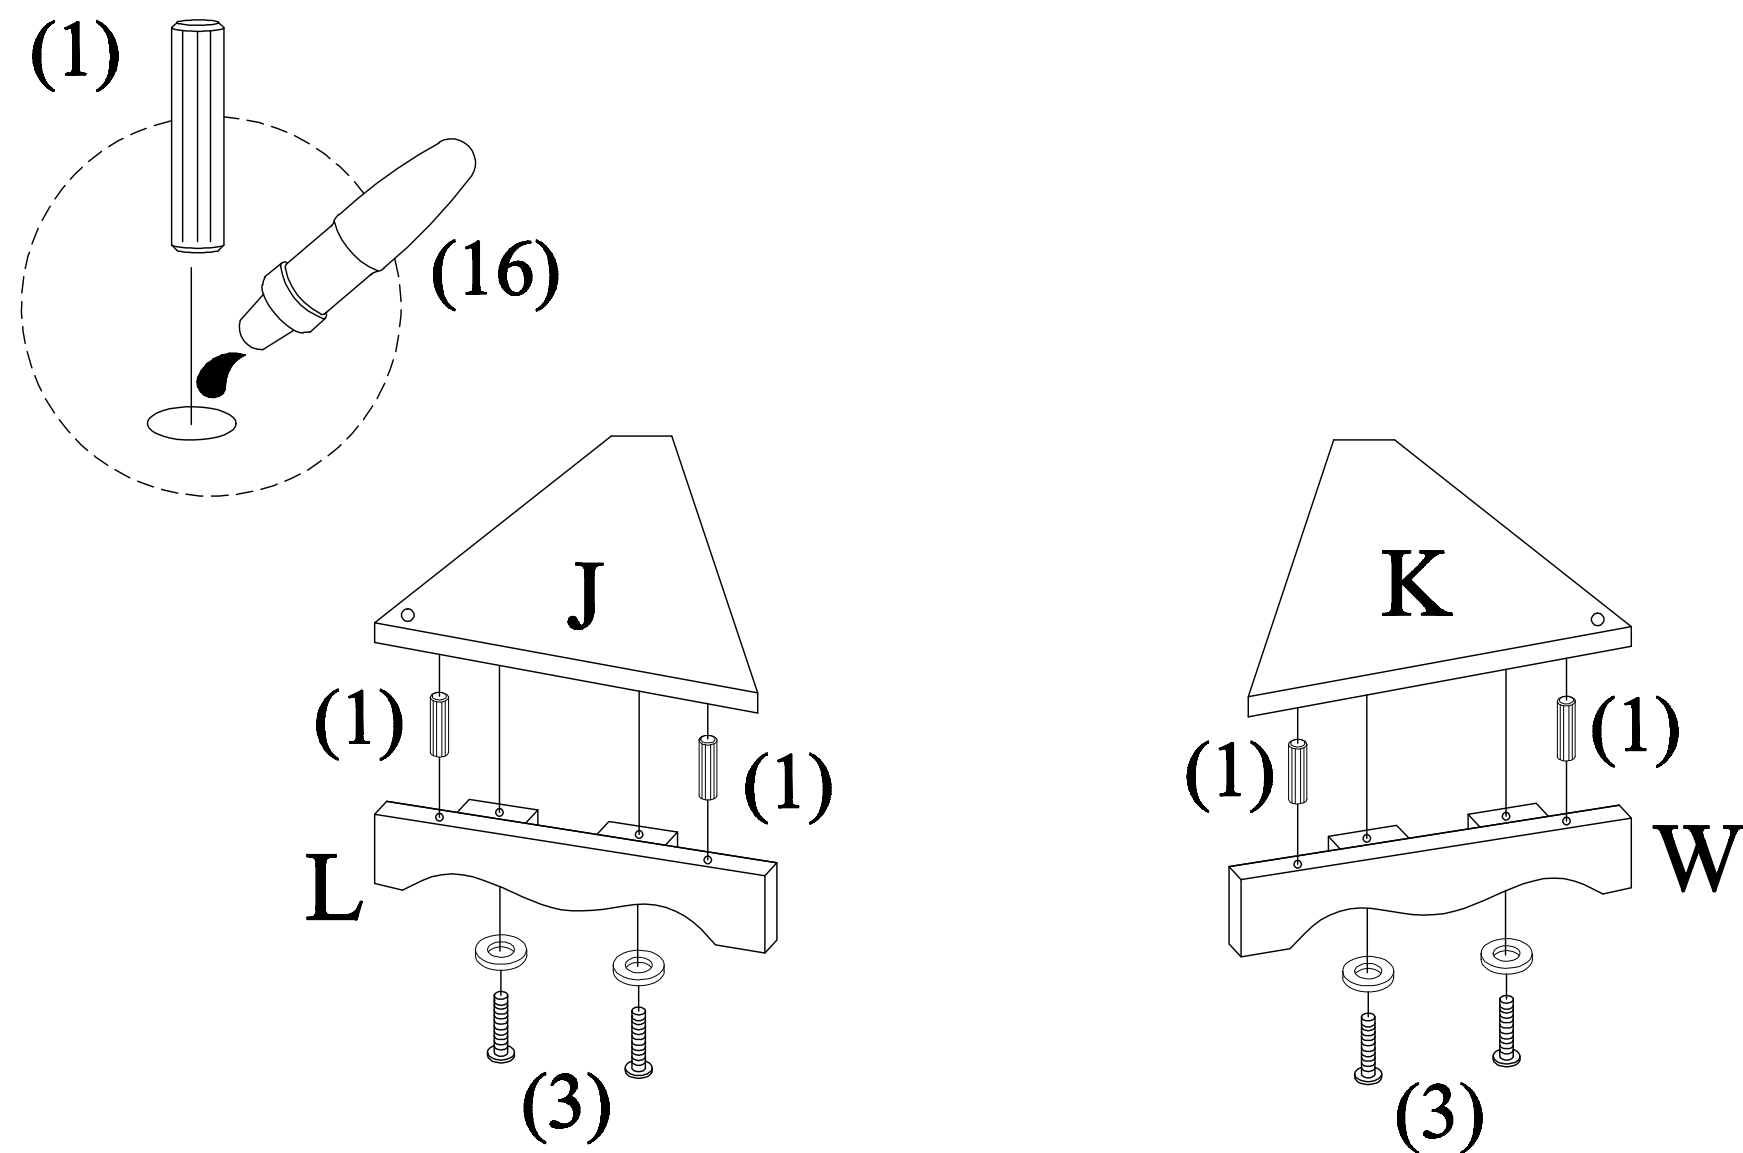- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES.
(DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (3) TO ATTACH ACROSS PANEL (L & W) AND BOTTOM PANEL (J & K) TOGETHER.




STEP 4: ASSEMBLE KNOB (6), HINGE (7)&(8), IRON SLICE (10)

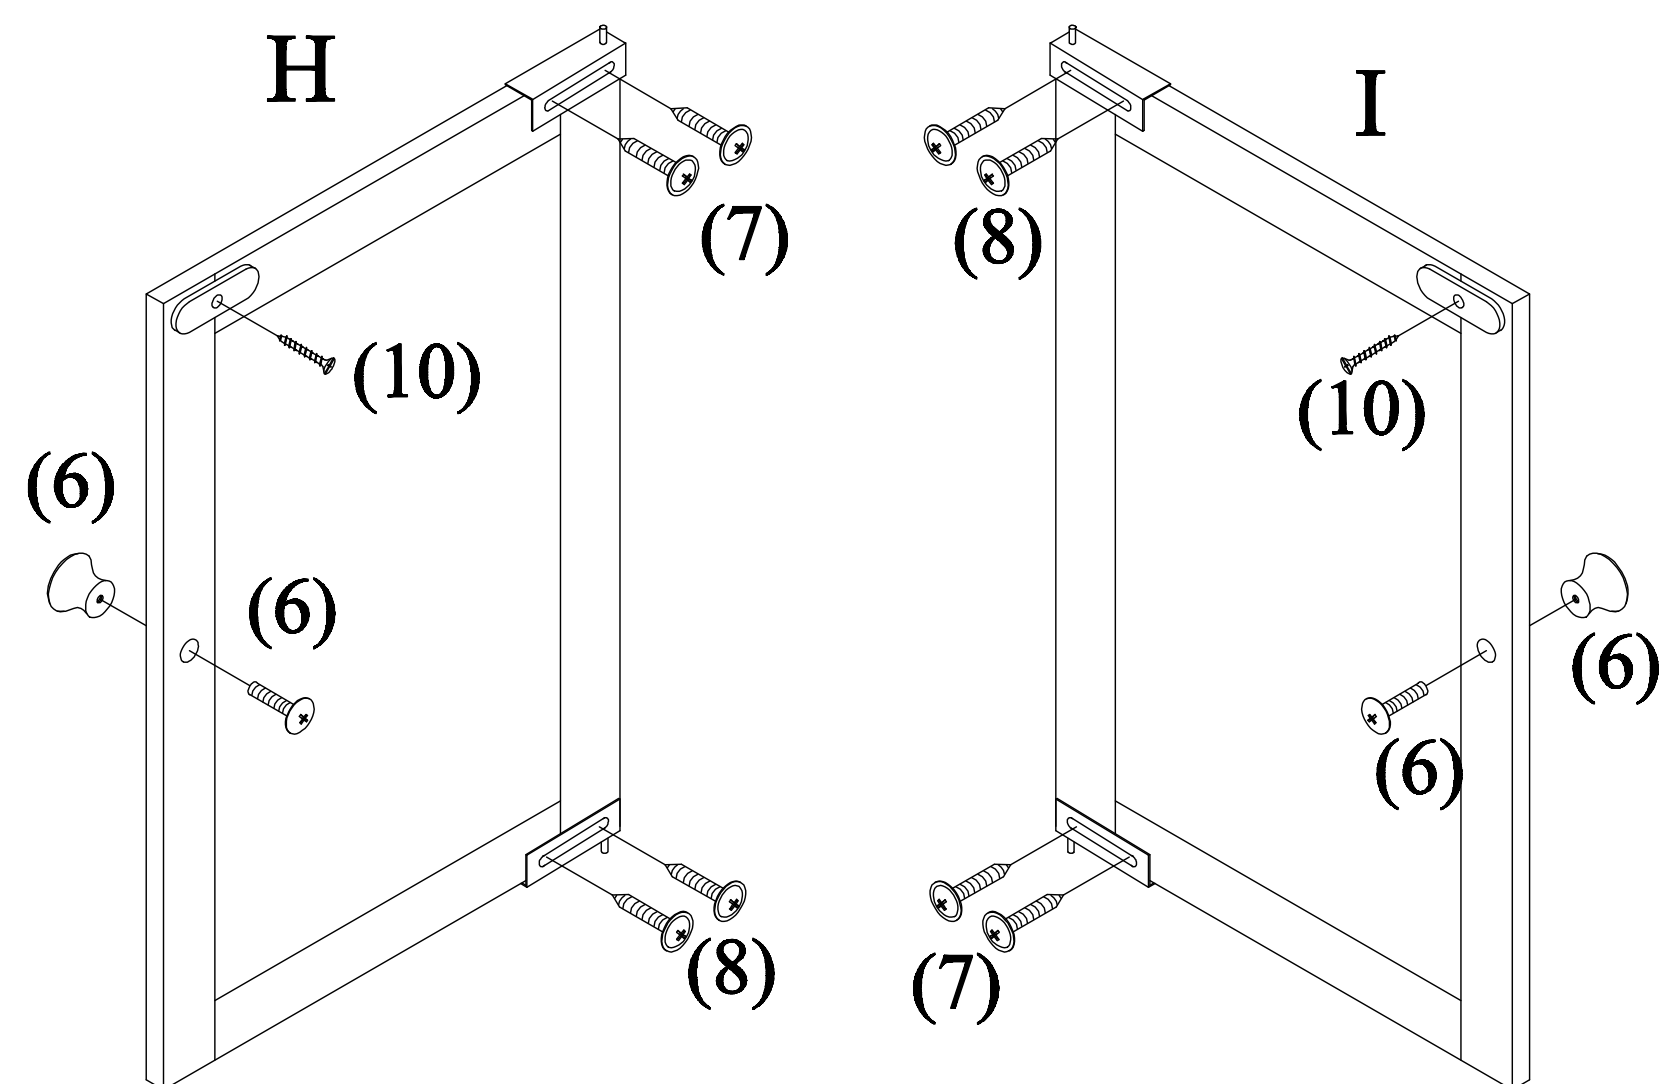- USE ROUND HEAD BOLT (6) TO ATTACH KNOB (6) ONTO DOOR (H & I).
- USE ROUND HEAD SCREW (7) & (8) TO ATTACH HINGE (7) & (8) ONTO DOOR (H & I) TOGETHER.
- USE FLAT HEAD SCREW (10) TO ATTACH IRON SLICE (10) ONTO DOOR (H & I).




STEP 5: ASSEMBLE MIDDLE PANEL (N & O) AND SHELF (M)

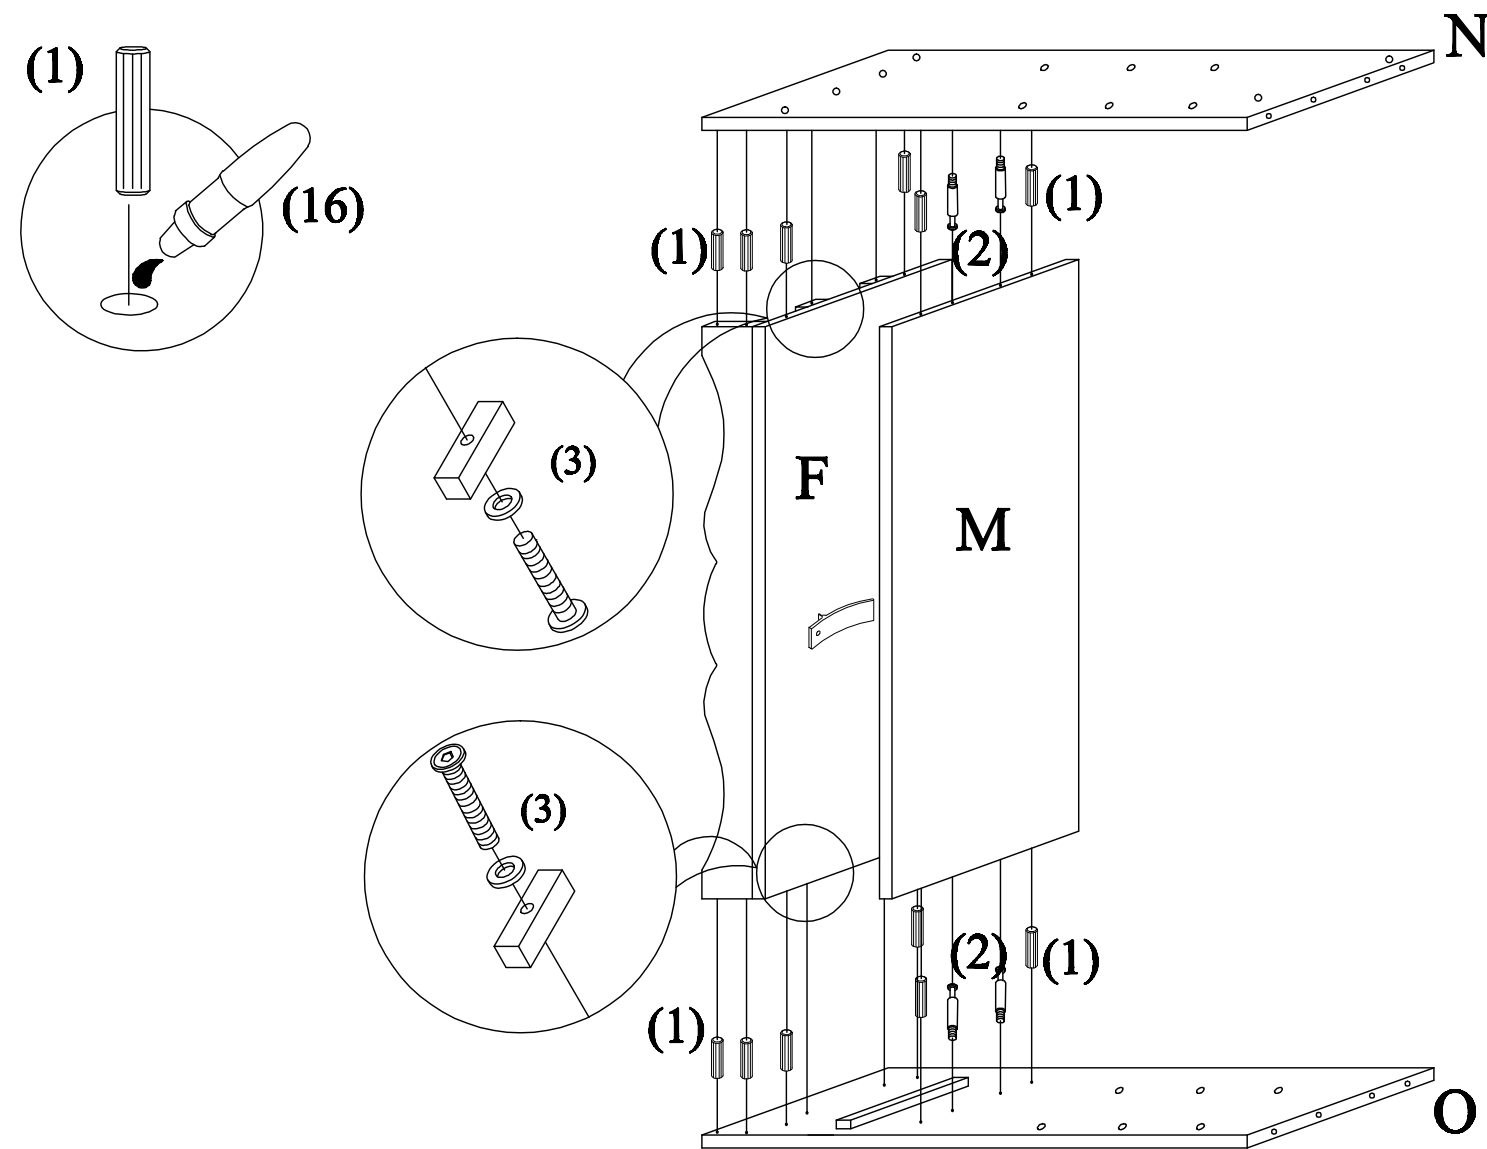- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES.
(DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (3) AND CAM BOLT & CAM-LOCK (2) TO ASSEMBLE MIDDLE PANEL (N & O), SHELF (M), AND BOTTOM PANEL (F) TOGETHER.




STEP 6: ASSEMBLE SIDE PANEL (P & Q)

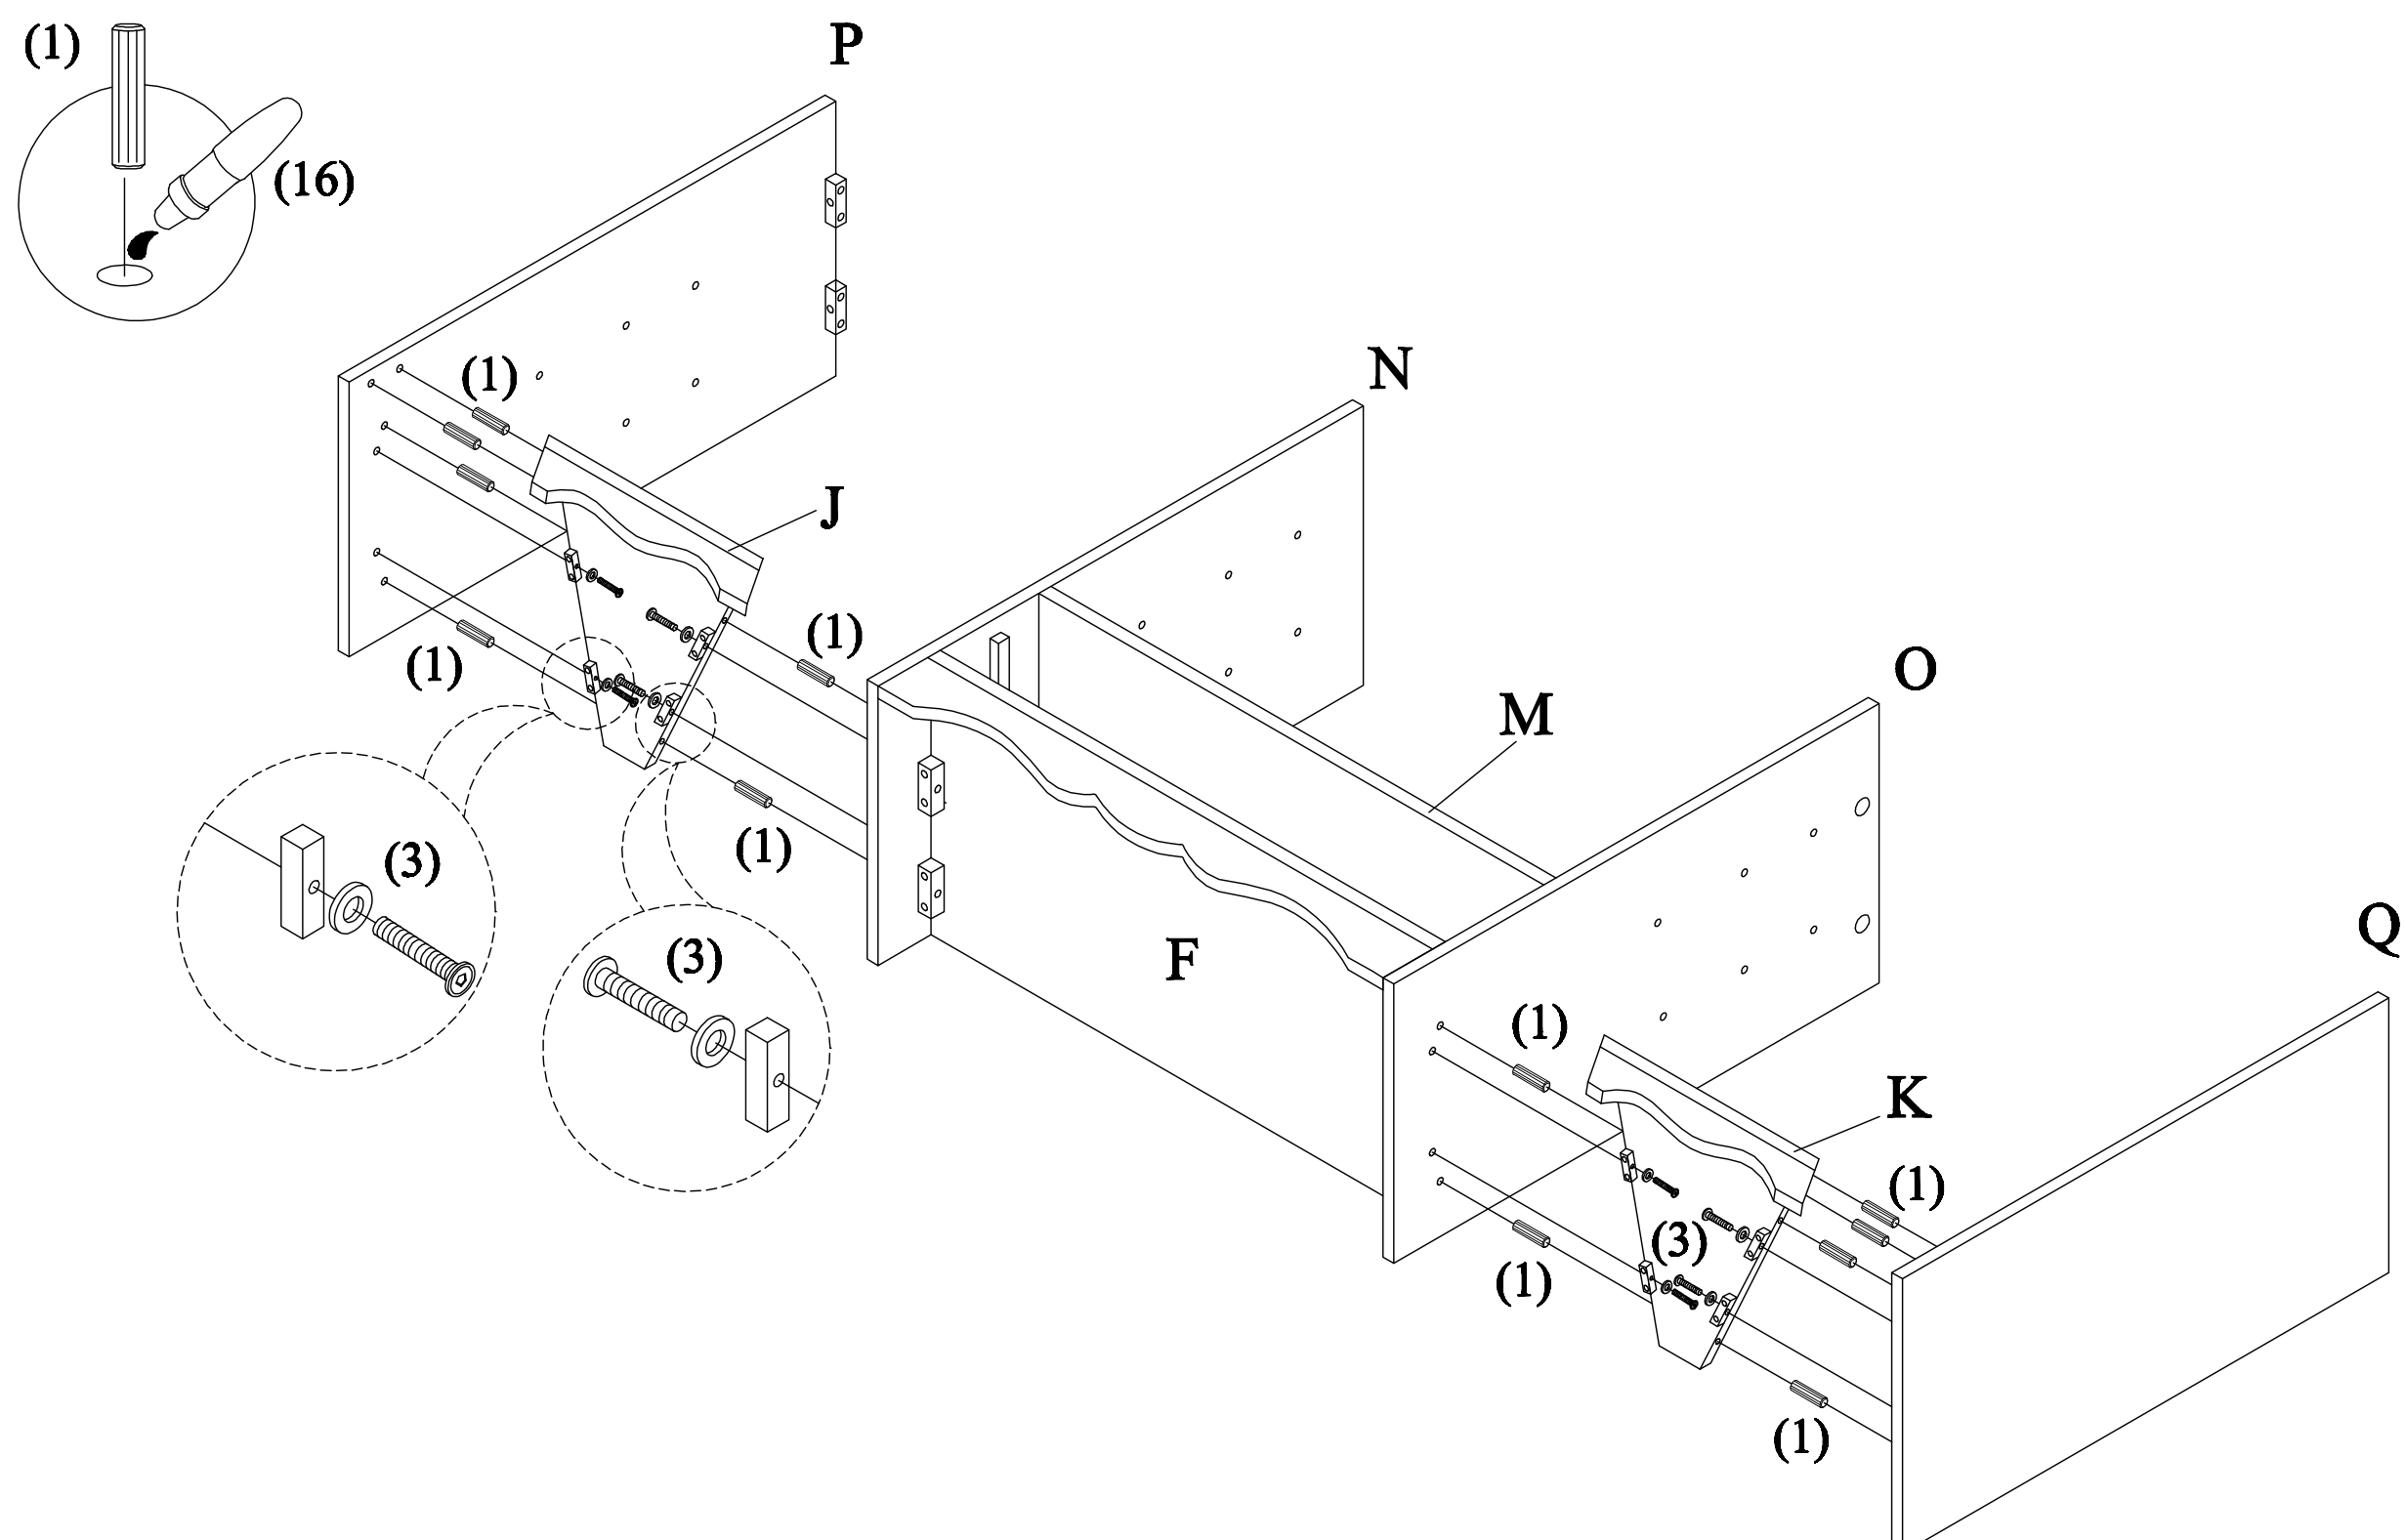- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES.
(DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (3) TO ASSEMBLE SIDE PANEL (P & Q), BOTTOM PANEL (J & K), MIDDLE PANEL (N & O) TOGETHER AS SHOWN.




STEP 7: ASSEMBLE TOP PANEL (R) AND DOOR (H & I)

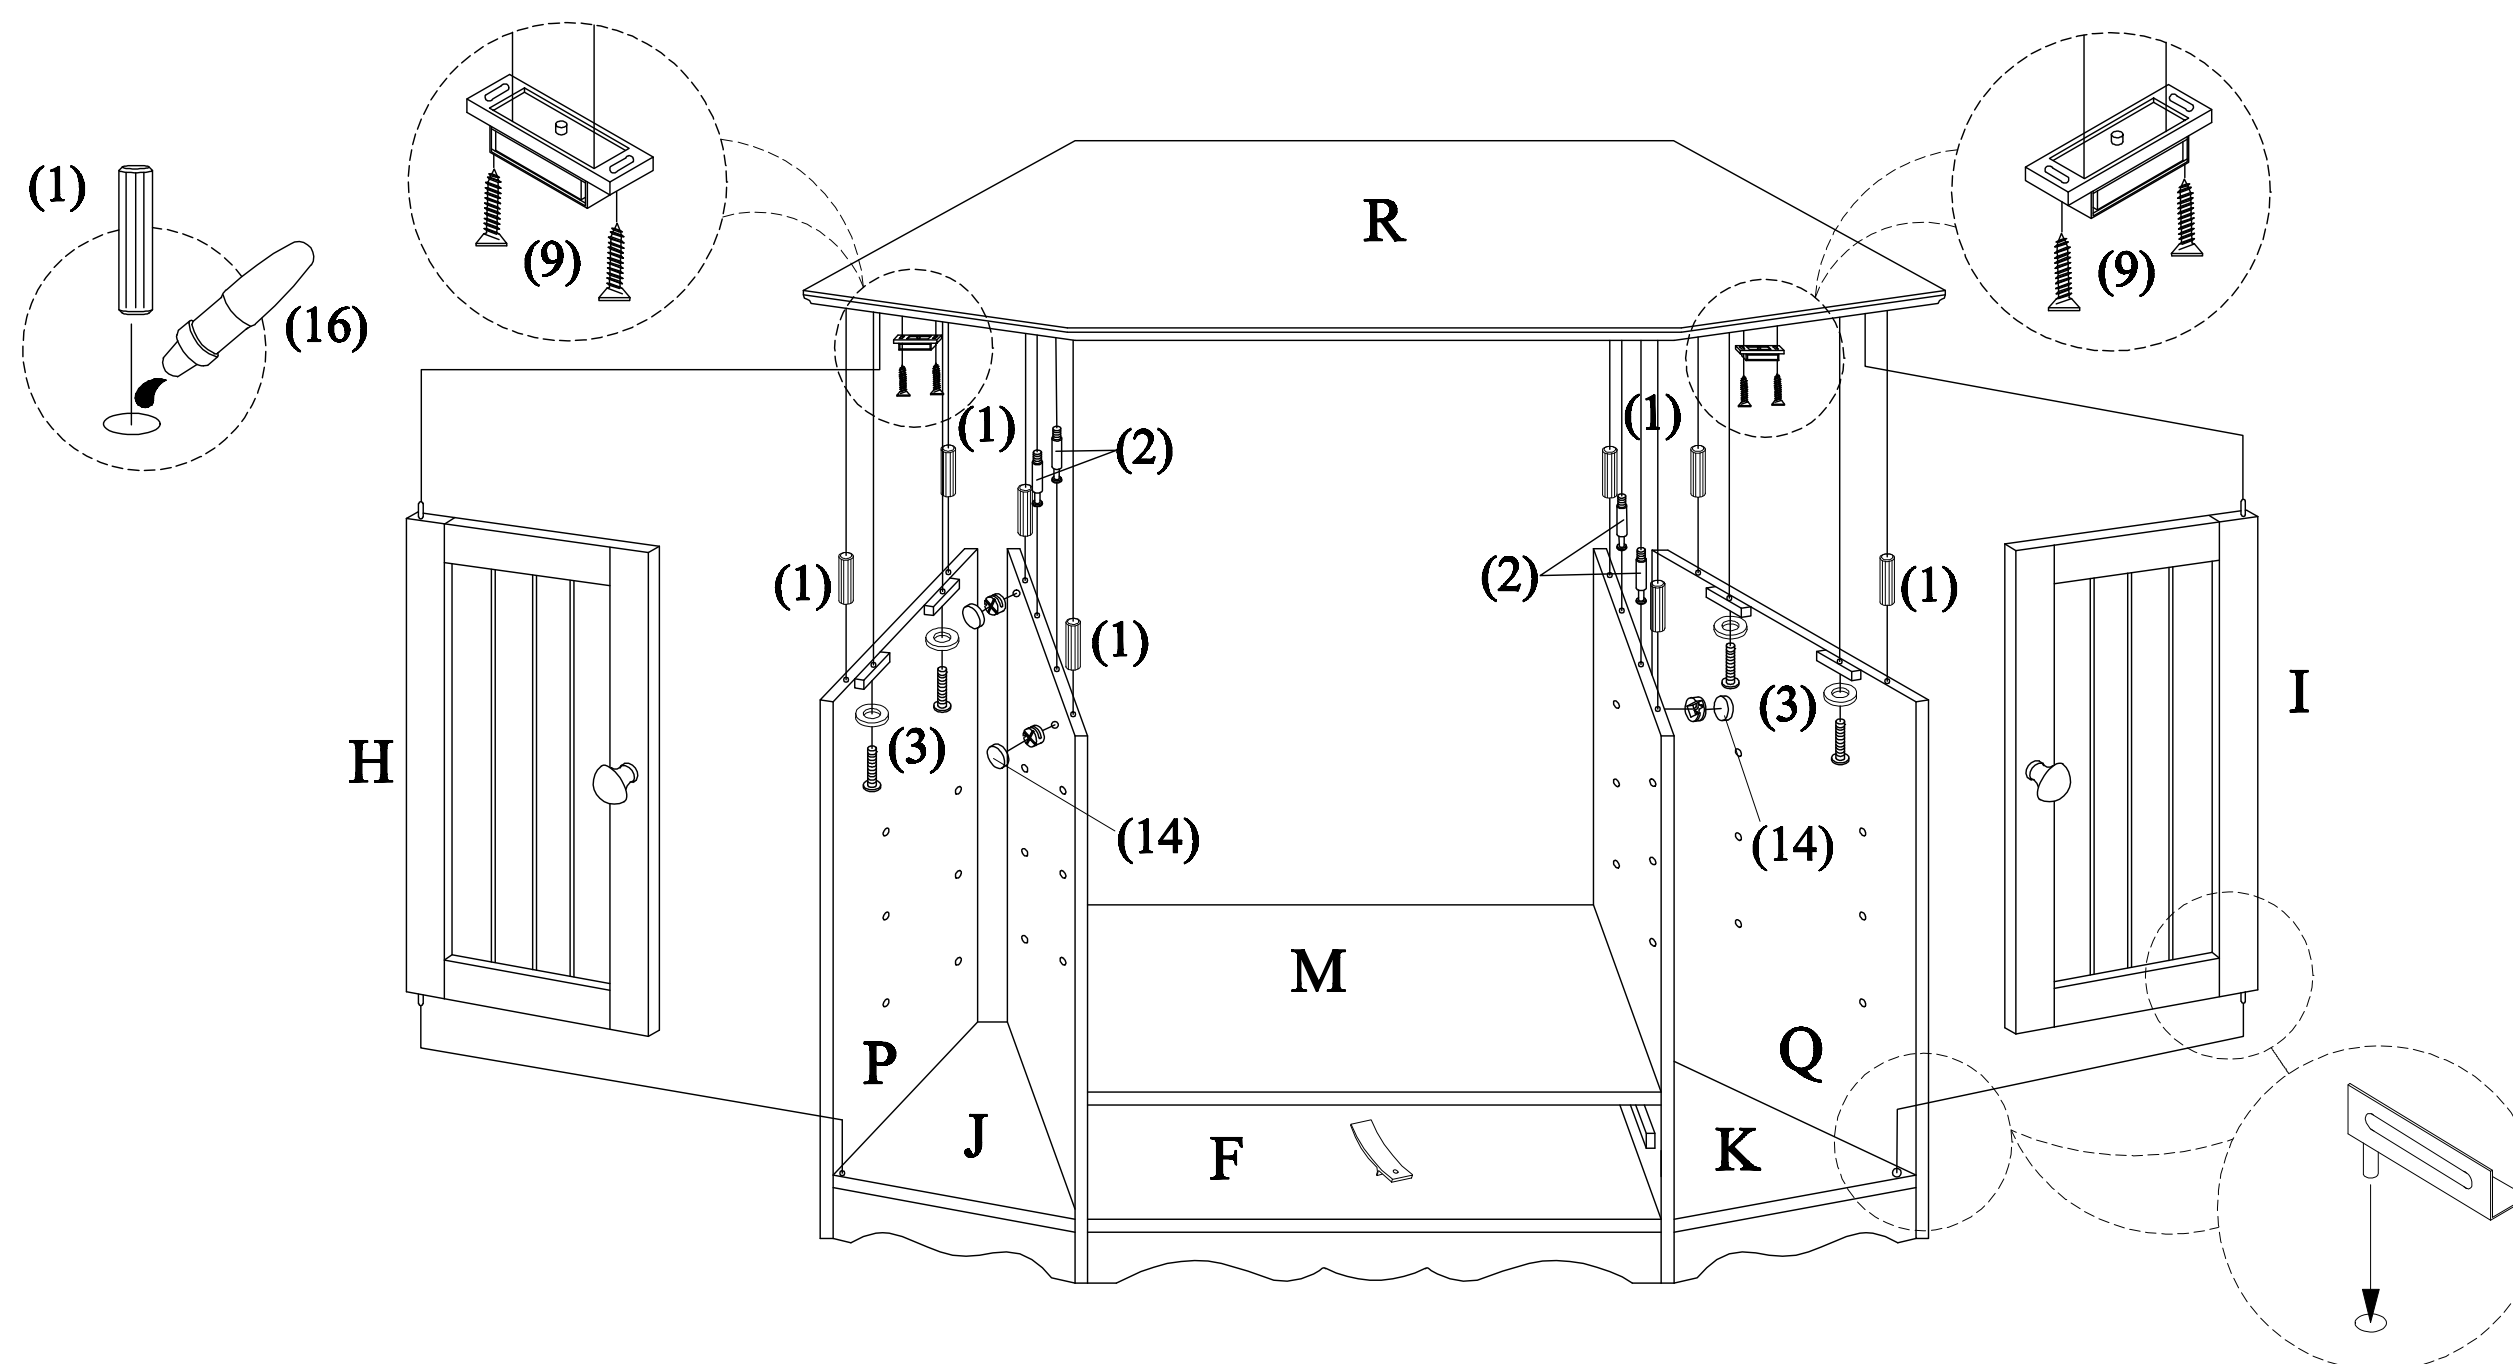- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES.
(DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE CAM BOLT & CAM LOCK (2) AND ROUND HEAD BOLT & FLAT WASHER (3) TO ASSEMBLE MIDDLE PANEL (N & O), SIDE PANEL (P & Q), TOP PANEL (R) AND DOOR (H & I) TOGETHER.
- USE ROUND HEAD SCREW (9) TO ATTACH MAGNET LOCK (9) ONTO TOP PANEL (R), INSERT THE HINGE OF DOOR (H & I) INTO THE RELEVANT HOLES ON THE TOP PANEL (R) AND BOTTOM PANEL (J & K) AS SHOWN.
- USE THE VELVET HOLE COVER (14) TO COVER THE CAM-LOCK HOLES.



STEP 8: ASSEMBLE SHELF (S, T, U) AND PLACE DRAWER

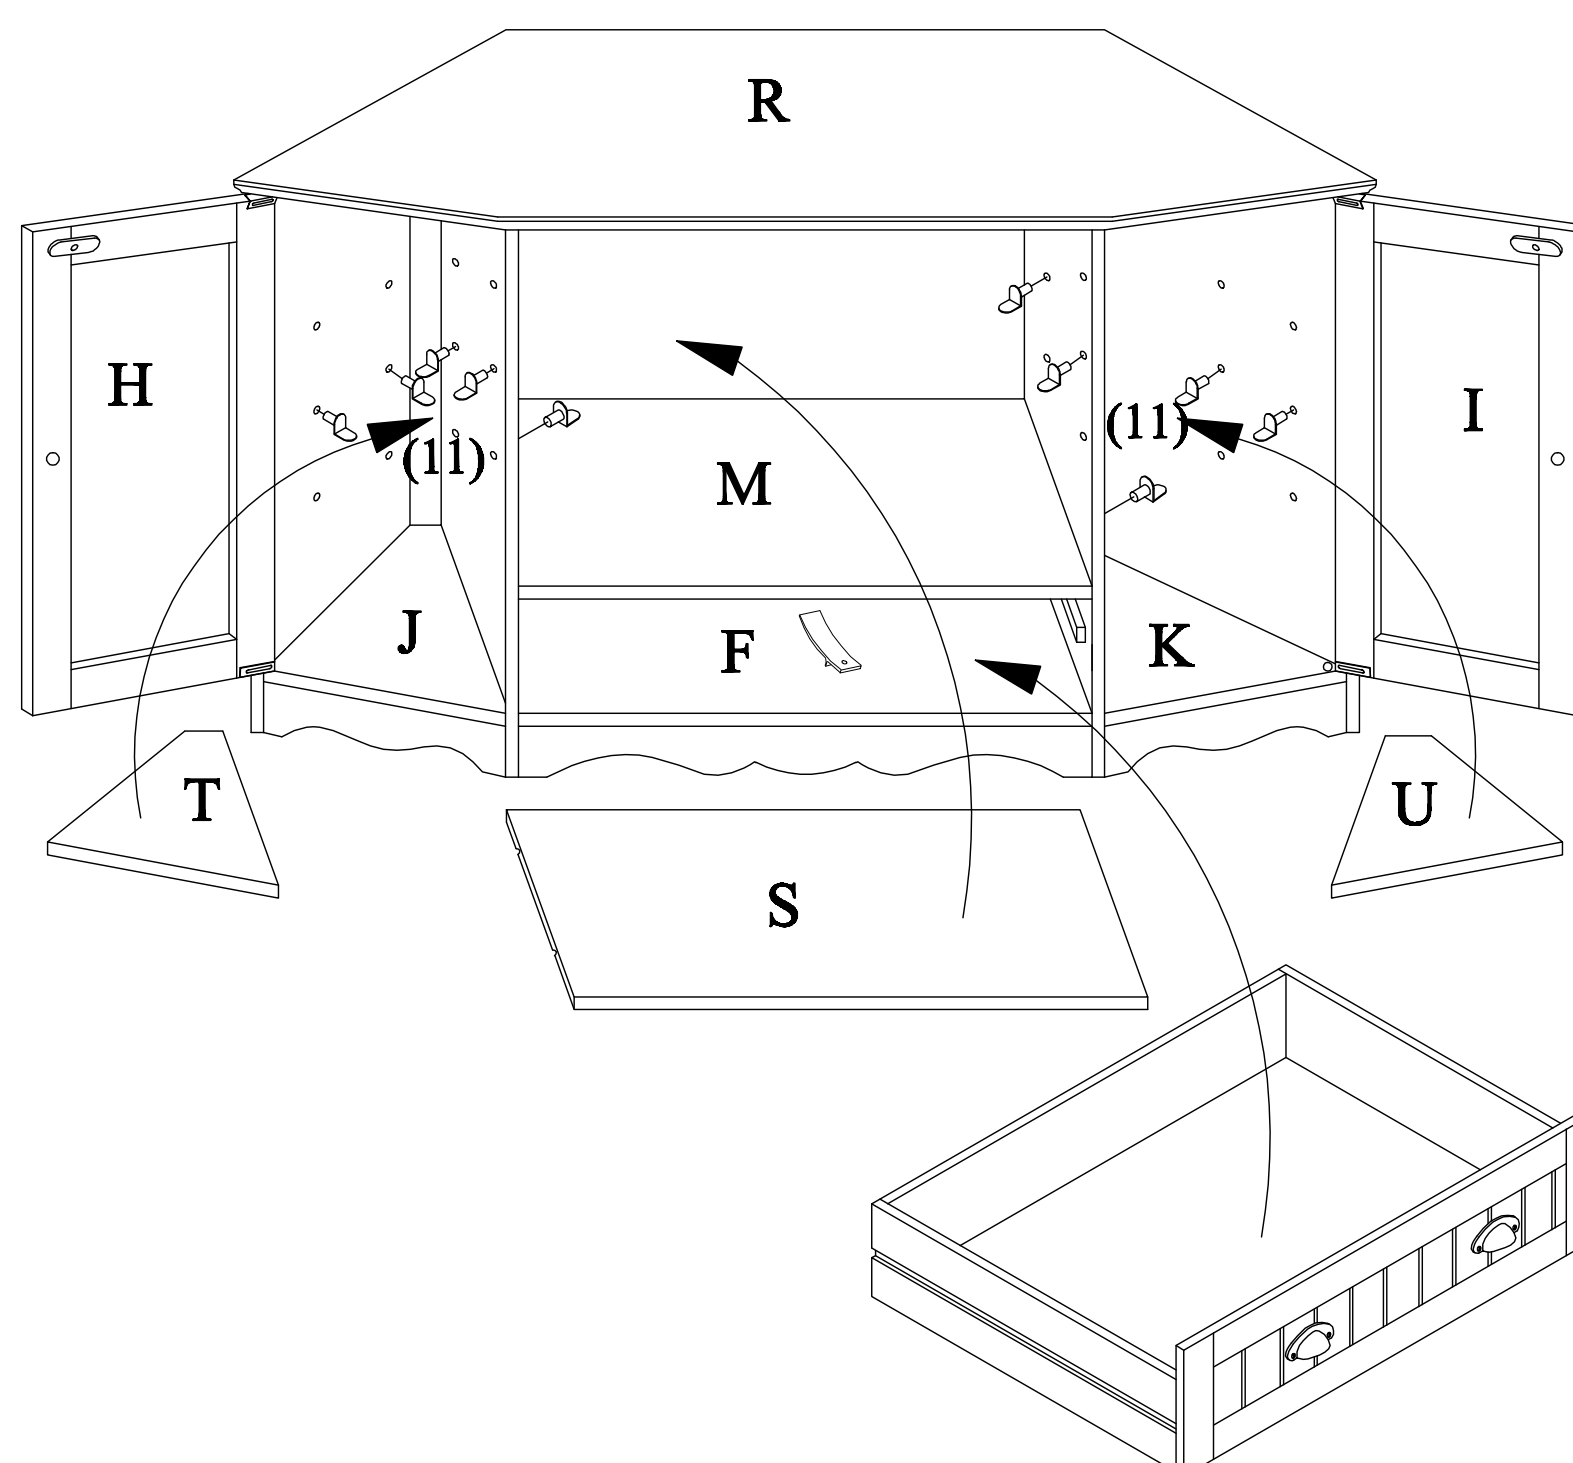- INSERT SHELF HOLDERS (11) INTO THE HORIZONTAL HOLES INSIDE OF SIDE PANEL (P & Q) AND MIDDLE PANEL (N & O), THEN PLACE SHELF BOARD (S, T, U) INSIDE OF THE DOOR (H & I).
- INSERT THE DRAWER UNDER SHELF (M) AS SHOWN.



STEP 9: ASSEMBLE BACK PANEL (V)

- USE ROUND HEAD SCREW (12) TO ATTACH BACK PANEL (V) ON THE BACK OF PRE-ASSEMBLED UNIT.

NOTE:BEFORE YOU ASSEMBLE BACK PANEL, PLEASE MAKE SURE THE 2 SIDE PANELS HAVE EVEN GAP BETWEEN THEM. IF UNEVEN, SHIFT THE SIDE PANELS EVENLY SPACED, THEN ATTACH BACK PANEL.

